

## **Your new Bino-Camera**

First, turn on the camera by pressing the Left button (Mode Button).  
You will see, either HI or LO. ( High Resolution or Lo Resolution)

After 1 second you will see a number. If you have not taken any photos, and you are in HI, you will see the number 52 on the right side of the screen, and 3 stars in the shape of a triangle.

Press the mode button again.

You will see OFF.

By pressing the Right button (Select Button) the camera will turn off.  
Press and hold the Mode button down again, for the 2 seconds, the camera will turn on again.

By pressing the Mode button twice you will see your photo count with a clock on the screen. This mode allows you 10seconds before a photo is taken. You will hear a series of beeps as it counts down.

By pressing the mode button 3 times, you will see a number on the screen and a trash can.  
By pressing the select button 2 times, you will erase all the photos in your camera.  
Press the mode button until you pass the trash can, you will see a square with a line thru it.

By pressing the Select button, you will only erase the last photo taken.  
If you press Select again, past the square you will see either a flashing star or the triangles, which we mentioned earlier.

Whatever mode you are in (HI or LO), if you press the select button you will switch modes and stay in that mode until you change it again.

HI mode holds 52 photos  
LO mode holds 209 photos

If your computer says, "NO PHOTOS IN CAMERA".  
Try switching to your other USB port.

When everything else has made you upset, call us we'll get you through this  
1-877-977-2673