



## Down Load Pictures


Restart the computer after the software and drive are installed. After the computer is restarted, connect the USB. The VIEWCATCHER system will detect that and appear the below screen. Please press NEXT and continue.

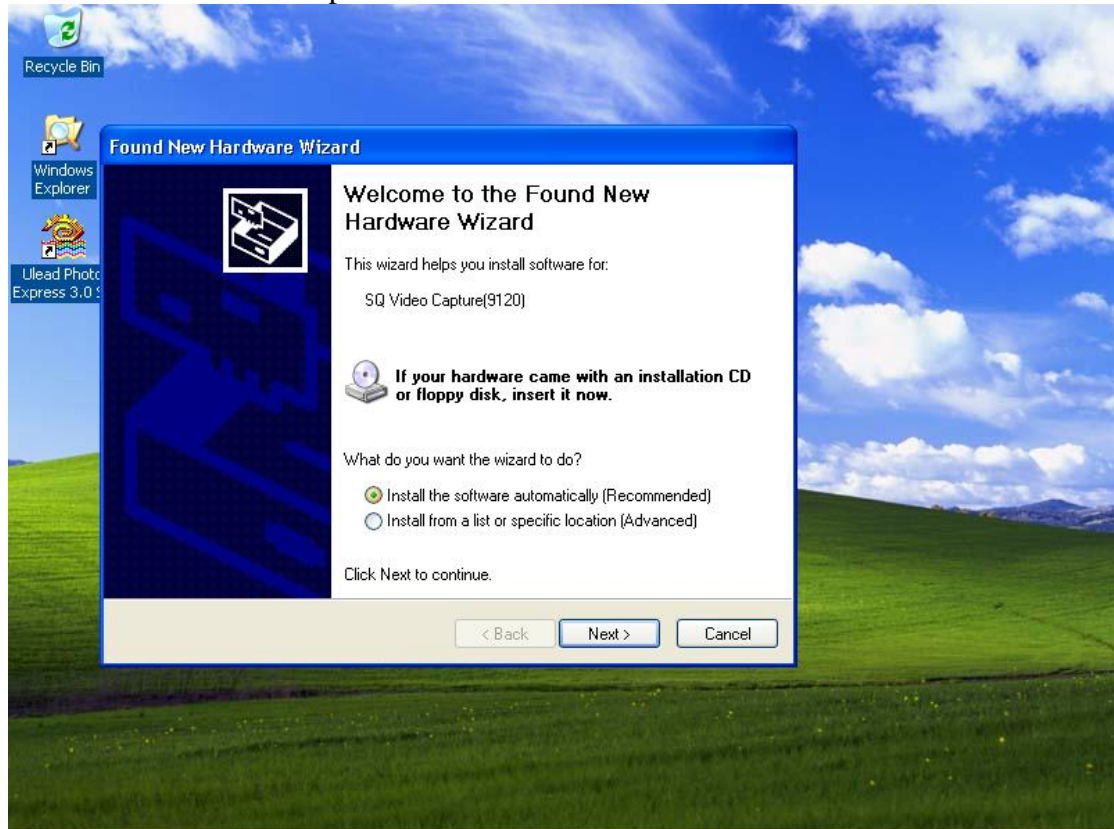


The system will be installed automatically.

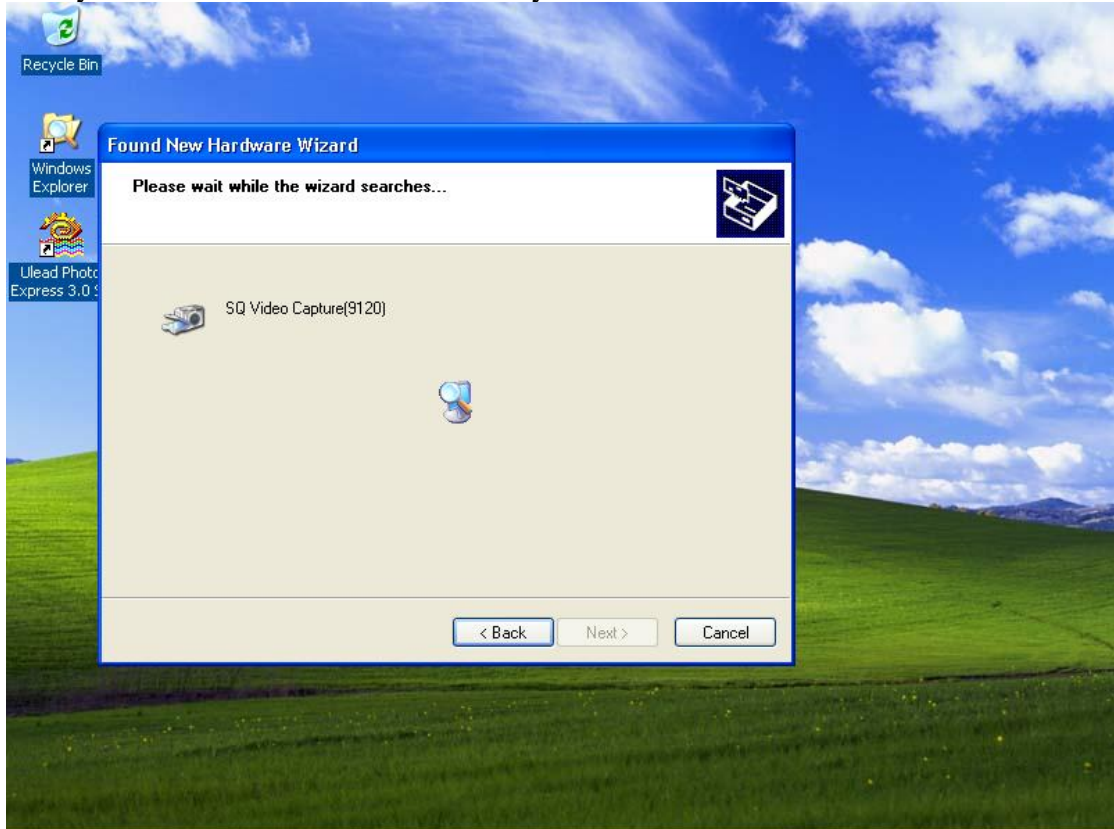


During the process of installation, the digital signature warning appears. Please continue the installation process because this product has applied the approval. There will be no any interrupt based on testing.

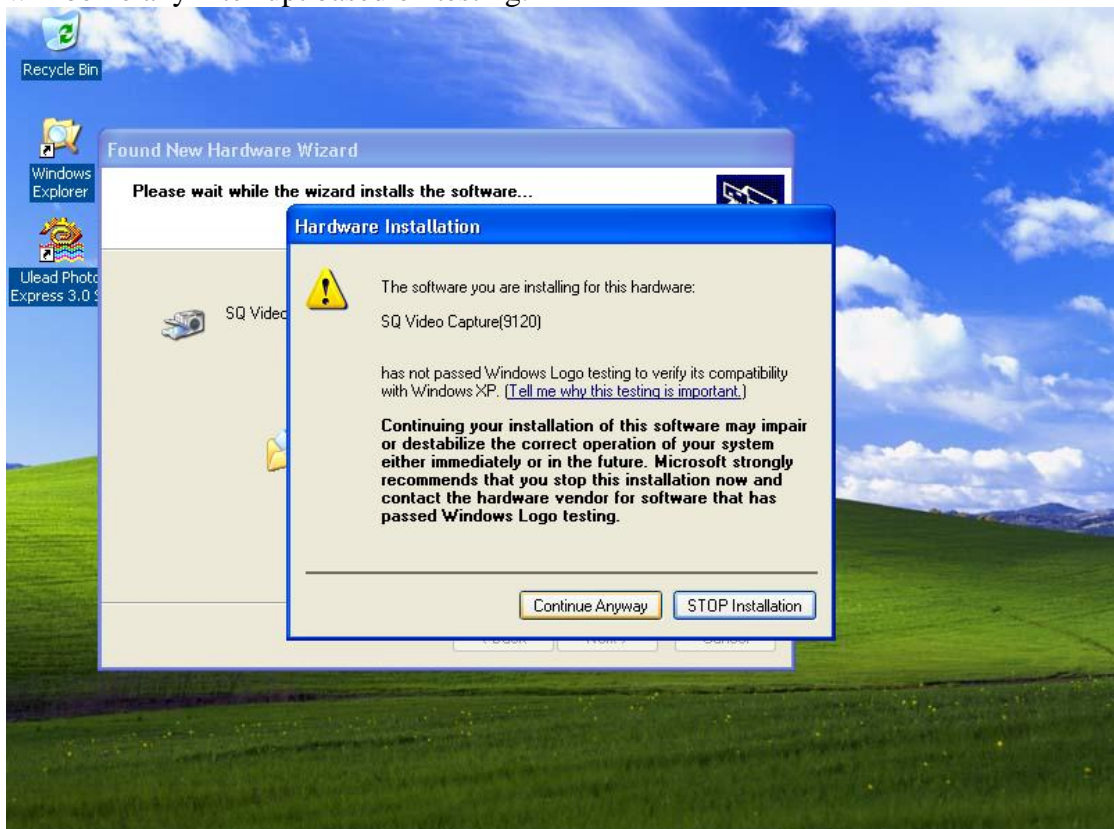

During the installation process, it will require you to place the original XP disk in drive if your XP system is not installed completely. Please place your disk into the drive and press OK to continue.

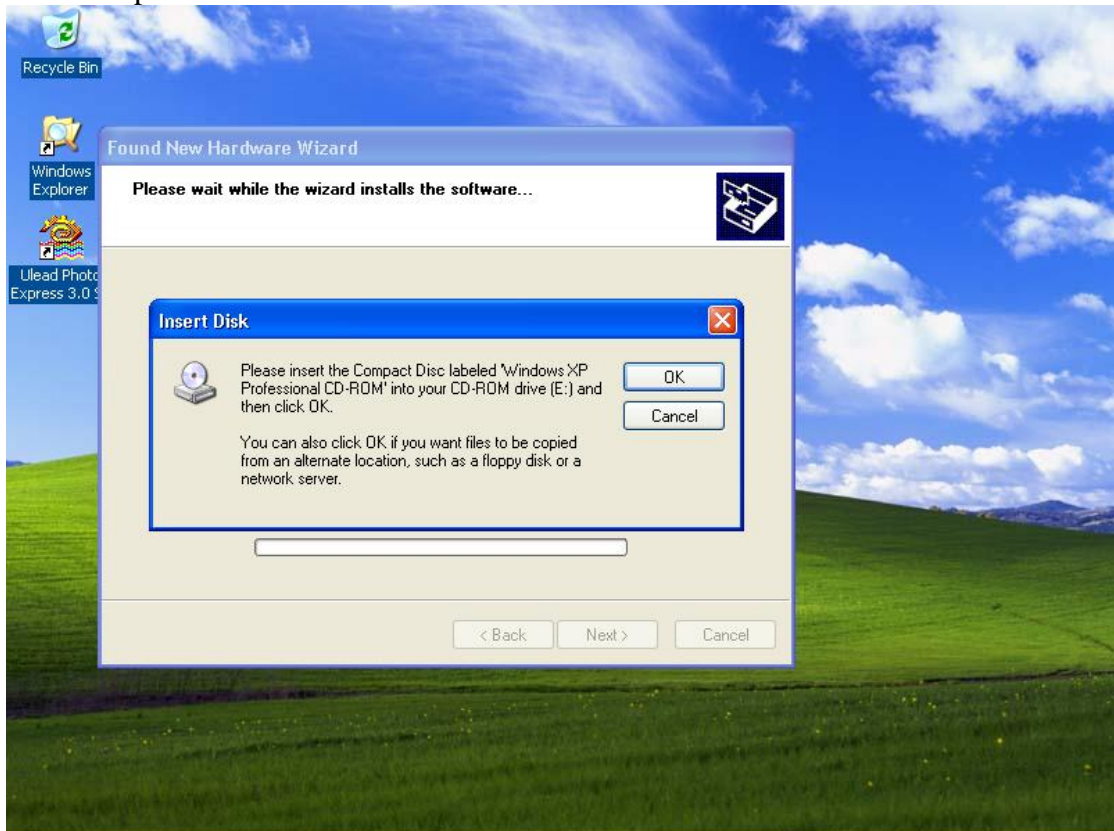

The program is installed automatically.

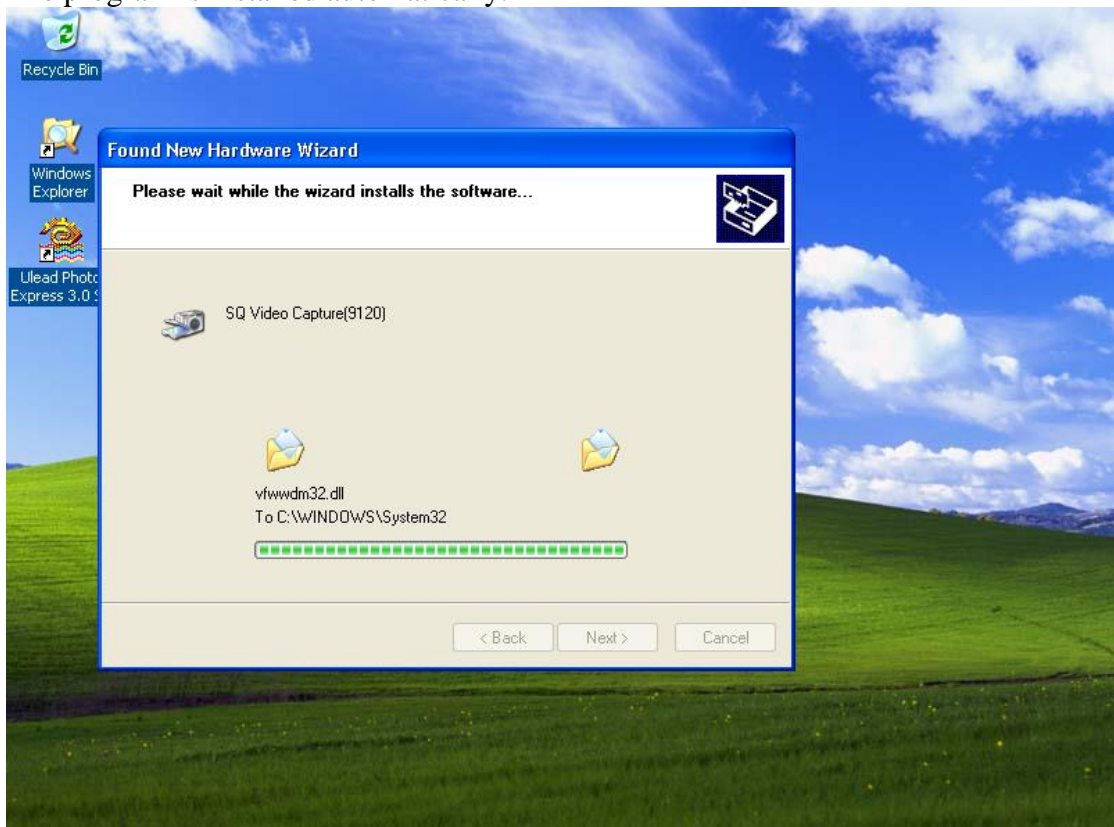

## Download Pictures

After the installation, start "ULEAD PHOTO EXPRESS 3.0SE" and it will appear the below screen for choosing the devices for the first time. (Attention: Please choose "DIGITAL CAMERA"). And press OK



Inter EXPRESS. Choose **GET** → **CAMERA**



Choose **"TheCamera90"**. Press **"Acquire"** for getting pictures.

